

Instruction Manual for Remote Control



This Remote Control will operate your Set Top box. Additionally it may be programmed to turn your TV On and Off.

Insert two new AAA batteries in the remote in the direction as indicated in the battery compartment.



TV Code Programming

Note: The Remote Control operates Sony TV by default.

If you have Sony TV, point the Remote Control to the TV and press the Power button. If the TV operates, you do not need to program the Remote Control.

A. Program by TV brand code:

1. Manually turn on the TV.
2. In the back of this manual, find the brand name and code number of your TV. For example, Panasonic TV: 005, 006, 007, 008,
3. First, press and hold the Setup key. Then, while holding down the Setup key, press the TV (power) key. The Setup key will turn red, indicating the remote is in program mode. Release both keys.
4. Enter the 3-digit Device Code (for example: code 008 under Panasonic TV). The red Setup key turns off if the code has been accepted by the remote control.
5. If the Setup key flashes twice, it means the code entered is incorrect, and the remote control remains in program mode. Re-enter the correct code number again. The Remote control will exit the program mode if the code is not entered within 10 seconds.
6. Point the Remote Control to the TV and press the Power key. If the TV turns off, the remote is now programmed to operate the TV.
7. If the TV fails to turn off, go back to Step 2 and enter the next code listed under the TV brand.

B. Program by Auto Search:

1. Manually turn on the TV.
2. Press and hold the Setup key. Then while holding down the Setup key, press the TV (power) key and hold both buttons down for 3 seconds. The Setup key will begin flashing, indicating the remote is in Auto Search program mode. If the Setup key is not flashing, wait till the LED turns off and then re-press the Setup key and then the TV (power) key. Continue Step 2 until the Setup key flashes continuously (indicating Auto Search programming

mode).

3. Release both keys and point the Remote Control at the TV. In the Auto Search programming mode, the POWER (on/off) signal for the TV is automatically transmitted to the TV from the remote control. Once the Remote Control has selected the correct code, the TV will switch off. Immediately press any key (except CH+ or CH- key) to stop the Auto Search and lock in the TV code.
4. Switch on the TV again by pressing the TV(power) key. If the TV turns on, the Remote Control is programmed.

C. Program by manual search:

1. Manually turn on the TV.
2. Press and hold the Setup key, then press the TV(power) key. The Setup key will turn red, indicating the Remote Control is in program mode. Release both keys.
3. Point the Remote Control to the TV and press the TV(power) key once every 2 seconds until the TV turns off. The Setup key will flash each time.
4. Once the TV turns off, do not press any keys and wait till the Setup key on Remote Control turns off. The Remote Control is now programmed.
5. Switch on the TV again by pressing the TV(power) key. If the TV turns on, the Remote Control is programmed.

D. Volume Priority:

The remote controls the Volume of Set Top box by default. To control the Volume of your TV, Press and release the Setup key and Volume Up key at the same time. The remote will control your Volume +/- key and Mute Key. To change back the Volume Control to Set Top box, press and release the Setup key and Volume Up key at the same time.

Brand Code List

BRAND	TV
Abex	007
Accruing	093
Admiral	016,031,133
Advent	044,048,052,053,055
Arventura	113
Aiko	015
Akai	006,014,034,038,050,094
Albatron	037
A-Mark	002
America Action	025
Amtron	144
Anam	025
Anam National	139,144
AOC	002,005,006,109,110,116,120,127
Apex Digital	020,043,045,047,061
Archer	002
Audiovox	002,015,025,030,032,040,049,060,108,101,144
Aventura	023
Axon	101
Belcor	005, 109
Bell&Howell	003,019,130,133
Bradford	025, 144
Brockwood	005, 109
Broksonic	002,025,027,031
Candle	006,013,109,113,125,127
Carnivale	006
Capehart	120
Carver	012
Celebrity	001
Celera	045

Centurion	127
Cetronic	139
Changhong	045, 115
Cinego	103
Citizen	006,008,013,014,015,109,119,125,127,129,133,139,144
Clairtone	110
Clarion	025
Classic	115,139
Clo Classic	109,110,114
Colortyme	109,127,131
Commercial Solutions	009, 088
Concerto	013
Concierge	135
Contec	025
Contec/Cony	110,137,139,143,144
Craig	025,139,144
Crosley	012
Crown	008,025,139,144
Curtis Mathes	003,006,008,009,012,013,014,016,017,019,022,030,038,042,069,086
CXC	025
Daewoo	005,008,015,030,032,034,109,116,127,139
Daytron	005,109,127
Dell	071, 089
Denon	017
Dimensia	130,134
Dumont	004,005,109,135
Durabrand	002,023,024,025,031,063
Dwin	016, 042
Dynasty	139

Electroband	001, 110
Electrohome	029,109,127,138
Elektra	004, 133
Emerson	005,008,019,023,024,025,027,030,03,032,109,110,127,132,139,144,109,12
Envision	006
ESA	023,050
Fisher	019,143
FlexVision	040
Funai	023,025,095,139,144
Futuretec	139,144
Futuretech	025
GE	009,010,024,030,042,086,088,098,10,111,117,118,122,123,127,130,134,13,140
Gibralter	004,005,006,109,135
GoldStar	005,006,007,024,029
Goldstay	109,116,127,142
Grundy	144
Grunpy	025
Haier	063
Hallmark	024,109,127
Harley Davidson	095
Harman/Kardon	012
Harvard	025, 144
Havermy	016
Helios	058
Hello Kitty	030
Himitsu	025
Hisense	043
Hitachi	003,007,013,017,029,068,109,127,133,143
Hyundai	095

Ima	144
Infinity	012, 141
Insignia	081
Inteq	004,135
Jancil	113
JBL	012, 141
JCB	001
Jc Penney	109,111,116,117,118,119,122,123,125, 127,129,130,132,134,138,140,142
Jensen	044,052,053,109,127
JVC	011,041,074,111,118,143
Kawasho	109,127
Kaypani	120
KEC	025,139
Kenwood	005,006,109,127
KLH	045,047
Kloss Novabeam	113,126,128
Kost	077
KTV	006,008,025,110,139,144
LG	024,037,057,071,078
Lloyd's	095
Loewe	136,141
Logik	003, 130,133
Luxman	013, 109,127
LXI	009,012,019,020,024,042,109,117,123, 127,129,130,134,141
Magnasonic	096

Magnavox	006,012,039,049,075,089,095,096,109, .125,126,127,128,141
Majestic	003, 130,133
Marantz	006,089,012,109,127,141
Matsushita	028, 033
Megapower	037
Megatron	002,017,024,109,127,141
Mei	110
Memorex	003,018,019,024,031,097,099,100,109, .127,130,133
MGA	005,006,018,024,109,116,127,138
Midland	004,007,008,009,010,042,111,117,118, 123,135,142
Minutz	140
Mitsubishi	005,016,018,024,054,106,109,116,127, 138
Monivision	037
Montgomery Ward	130,133
Motorola	016
MTC	005,006,013,014,109,110,116,119,127, 129
Multitech	025, 144
Multivision	112
NAD	020,024,059,109,127,129
NEC	005,006,013,092,109,116,127,131
Nikei	139
Nikko	006,015,024,109,127
Norcent	043

NTC	015
Olevia	067,072, 084
Onking	139
Onwa	025, 139,144
Optimus	019,022,028,033,096,099, 100
Optonica	016, 021
Orion	027,031,135
Panasonic	010,028,033,099,100,111,118,141
Penney	002,005,006,007,008,009,010,014,020, .024,042,086
Philco	005,006,012,109,116,125,126,127,128, 141
Philips	012,036,089,109,122,125,126,128,141
Pilot	005,006,008, 109
Pioneer	022,035,059,109,127
Polaroid	005,008,015045,058,077,107,079,080, 081,082,083,085,104,105
Portland	109,116,127
Price Club	119
Prima	044,048,052,053
Princeton	037
Prism	010, 118
Proscan	009,042,086,088,098,116,123,130,134
Proton	002,024,109,120,121,127
Pulsar	004,005,135
Pulser	109
Quasar	010,021,028,033,099,111,118,141

RadioShack	005,006,007,008,009,013,019,021,024,025,029,042,095,097
Radio Shack/Realistic	109,114,127,130,134,139,142,144
RCA	005,009,035,042,064,069,073,086,088,090,098,102,109,114,116,117,123,127,130
Realistic	005,006,007,008,013,019,021,024,025
Rhapsody	110
Runco	004, 006, 135
Sampo	006,007,008,109,120,127,142
Samsung	005,006,007,013,014,024,038,046,050,051,065,094,109,116,117,119,127,129,142
Samsux	008, 127
Sansui	031, 095
Sanyo	019, 109,143
Scimitsu	005
Scotch	024, 109,127
Scott	005,024,025,027,109,127,139,144
Sears	009,012,013,019,020,023,024,042,095,109,117,119,123,127,129,130,134,143
Sharp	008,016,021,109,127
Sheng Chia	016
Shogun	005, 109
Signature	003, 130,133
Signet	077
Simpson	125
Sony	001,066,095

Sonic	110
Soundesign	024,025,109,125,127,139,144
Spectricon	002
Squareview	023
SSS	005,025,109,139,144
Starlite	025, 144
Supremacy	113
Superscan	016
Supreme	001
SVA	043, 058
Sylvania	023,025,095,096,109,125,126,127,128,141
Symphonic	023,025,095,096, 144
Syntax	067,072,084
Tandy	016, 026
Tatung	002
Technics	010,028,111,118
Techwood	002,010,013,109,111,118,127
Teknika	003,005,008,012,013,014,015,018,025,109,113,116,119,125,127,129,130,133,139,143,144
Telecaption	124
Telefunken	013, 038
Telerent	130,133
Tera	109,121
Thomas	095
TMK	013,024,109,127
TNCI	004

Toshiba	014,019,020,033,056,070,076,078,087,091,092,119,124,129,143
Totevision	008
TVS	031
Universal	122,140
Vector Research	006
Victor	011
Vidikron	012
Vidtech	005,024,109,116,127
Viking	113
Wards	003,005,006,012,013,021,024,059,070,109,116,122,125,126,127,128,130,133,134,140,141
Waycon	020
Westinghouse	001,030,062
White Westinghouse	031, 032
Yamaha	005,006,109,116,127
Zenith	003,004,015,024,031,068,078,095,109,130,133,135
Zonda	002